

Operation manual

Model: AA17055


Step 1.

Open the Fiber optic terminal box. Check and prepare installation tools and accessories. To establish easy and safe installation put the box where it will be installed and measure the required length of the cable. Prepare the safe installation of the box.




Step 2.

Strip the cable the required length, minimum 0.5 meter or more, to establish easy and safe installation with enough buffer size. Pass through the cable the rubber membrane.

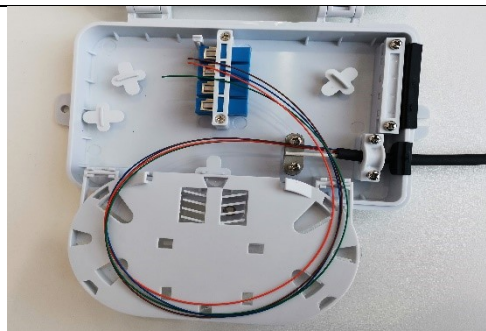


Step 3.

Fixing the cable strength member on part (2) and stabilize with cable fixing part (1) inside the box.

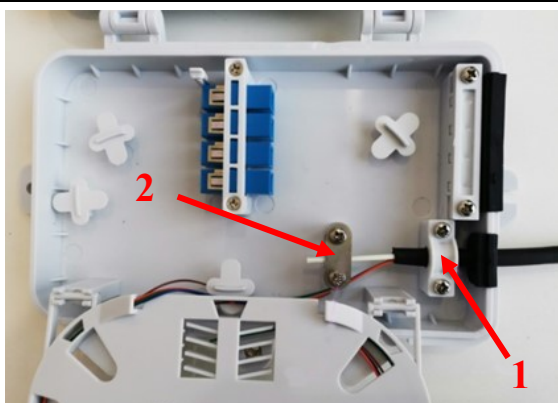


Step 4.

Connect the pigtails (1) to the connectors. Pass through the drop cables the rubber seal (6), connect them (4) and ensure stress relief (5). Pass the pigtails inside (2) to the upper side of the splice tray (3).

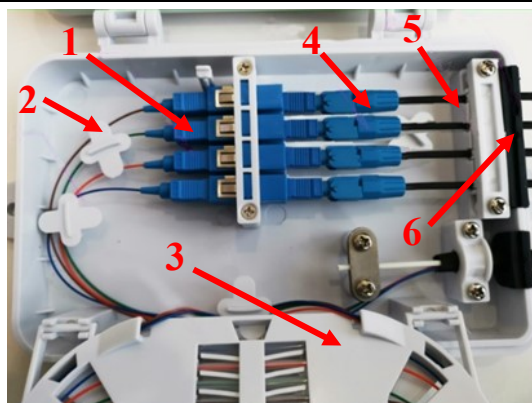

Step 5.

Splice the stripped cable (1) with the pigtails (3). Place the splice sleeves in the splice tray (2).

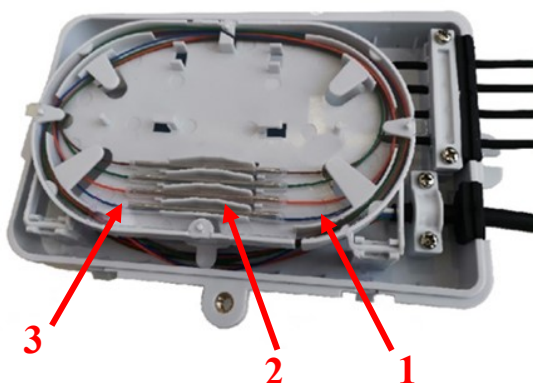

Step 6.

Close the box after finish light test or the measuring of all fibers.

