

# Operation manual

Model: AA17048


## Step 1.

Open the Fiber optic terminal box. Check and prepare installation tools and accessories. To establish easy and safe installation put the box where it will be installed and measure the required length of the cable. Prepare the safe installation of the box.




## Step 2.

Strip the cable the required length, minimum 0.5 meter or more, to establish easy and safe installation with enough buffer size. Fix the cable inside the box with cable tie.

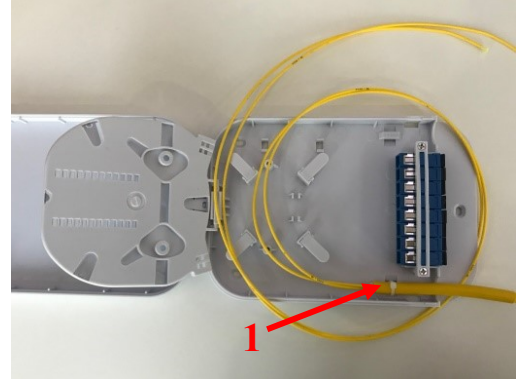


## Step 3.

Connect the pigtails (1) on the adapters (2), then coil the extra cable and pass the stripped cable inside the upper splice tray (3).

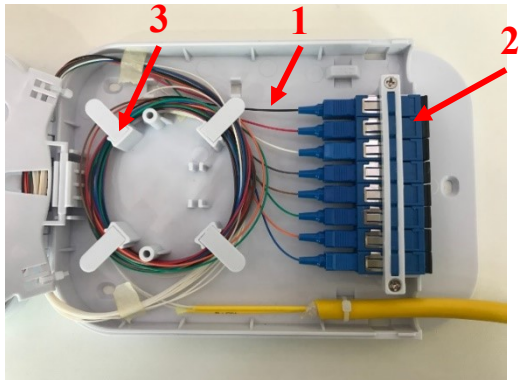

## Step 4.

Splicing the stripped cable (1) with the pigtails (3). Splicing fiber protect with splice sleeve (2).

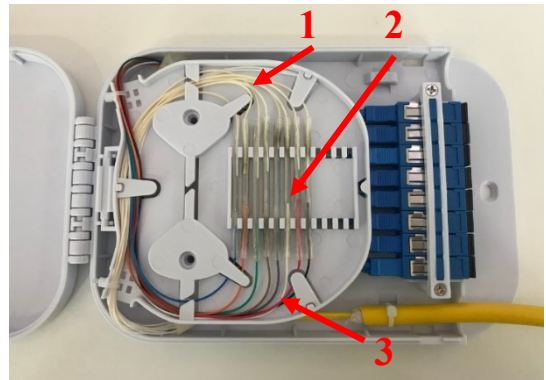

## Step 5.

Close the box after finishing the basic light test or the measuring of all fibers.



 **OPTICAL**

[www.optical.hu](http://www.optical.hu)